




Chrome Plastic Front Axle Cover

HOW TO INSTALL:

Front Axle Cover Kit contains:

- Removable hub cap
- 10 Lug nut covers
- 2 Metal washers per axle cover (only needed when using push-on nut covers)
- Plastic rim protector (must use this on aluminum wheels!)

Axle covers fit 10-hole wheels that are 22.5" or 24.5" in size. They work with hub and stud piloted wheels with a 11 1/4" bolt circle pattern.

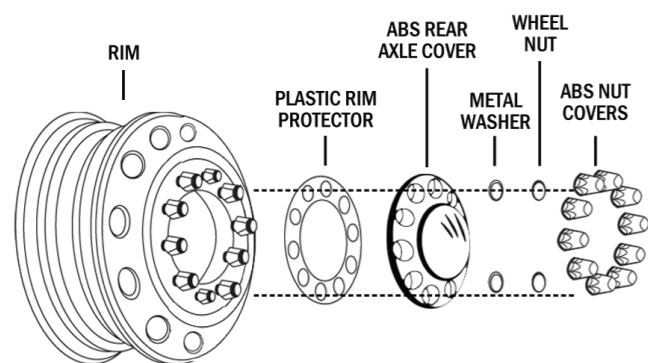

1. When installing on aluminum wheels, the plastic rim protector must be used to avoid damage.

2. Metal washer installation: Remove two opposing wheel nuts from the wheel and align all 10 holes of the axle cover over the studs and nuts. Install one metal washer over each stud with the removed wheel nut. Make sure the tab fits into the guide hole so that the washer lays flat side up. The raise surface of the washer should face in toward the rim. **If you're using THREAD-ON lug nut covers, using the metal washers is optional.

3. Re-install wheel nuts over the metal washers.

4. Install plastic lug nut covers over each nut until they are flush with the inside of the rim hole. Now your axle cover is secure!

Threaded lug nut covers require a minimum of 1/2" of exposed thread.

CAUTION:

The plastic rim protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. Raney's shall not be responsible for improper installation of the product.




Chrome Plastic Rear Axle Cover

HOW TO INSTALL:

Rear Axle Cover Kit contains:

- Removable hub cap
- 10 Lug nut covers
- 2 Metal washers per axle cover (only needed when using push-on nut covers)
- Plastic rim protector (must use this on aluminum wheels!)

Axle covers fit 10-hole wheels that are 22.5" or 24.5" in size. They work with hub and stud piloted wheels with a 11 1/4" bolt circle pattern.

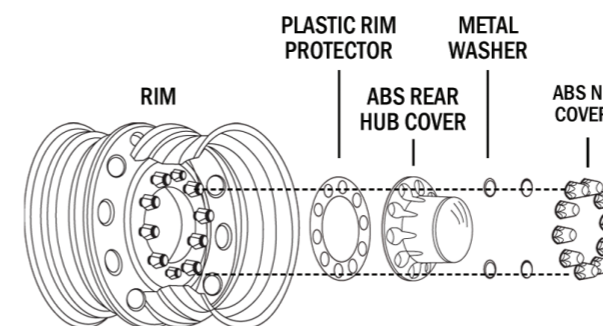

1. When installing on aluminum wheels, the plastic rim protector must be used to avoid damage.

2. Metal washer installation: Remove two opposing wheel nuts from the wheel and align all 10 holes of the axle cover over the studs and nuts. Install one metal washer over each stud with the removed wheel nut. Make sure the tab fits into the guide hole so that the washer lays flat side up. The raise surface of the washer should face in toward the rim. **If you're using THREAD-ON lug nut covers, using the metal washers is optional.

3. Re-install wheel nuts over the metal washers.

4. Install plastic lug nut covers over each nut until they are flush with the inside of the rim hole. Now your axle cover is secure!

Threaded lug nut covers require a minimum of 1/2" of exposed thread.

CAUTION:

The plastic rim protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. Raney's shall not be responsible for improper installation of the product.