

Int -7000

Figure 1

Put The Visor Together With The Brackets & Mark The Holes For The Brackets.

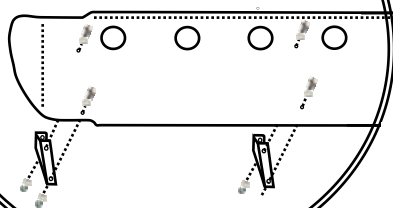


Figure 2

Drill Out The Holes With A 1/2 Drill Bit. Put In The Weld Nuts. Remember To Drill Slow, You Don't Want To Drill In To Your Inner Cab

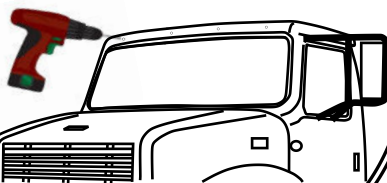


Figure 3

Put on New Brackets & Tighten Them On To The Truck

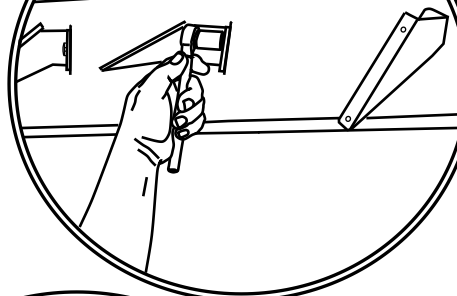


Figure 4

Now Place The Visor On Top Of Brackets & Tighten All The Screws




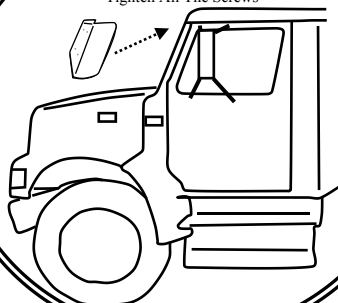







Figure 5

Now That You Are Finished With Installing Your ATA Visor Take Plastic Off The Visor & Clean With Windex

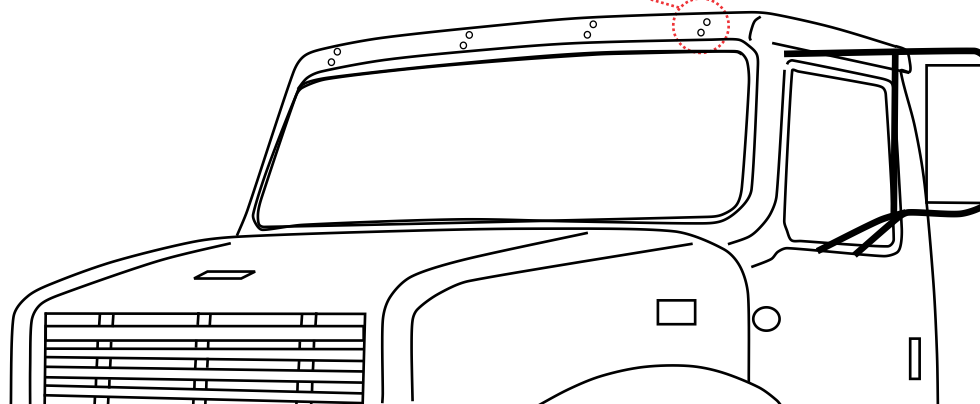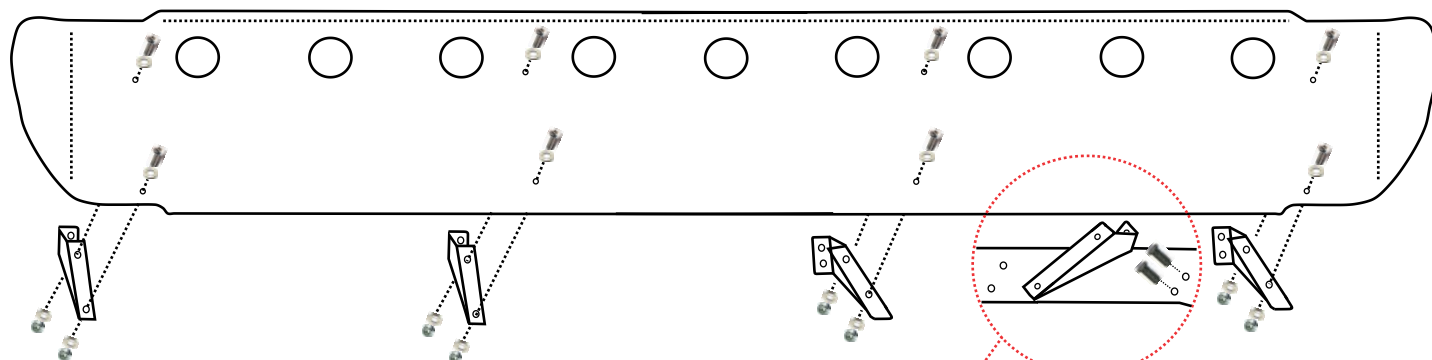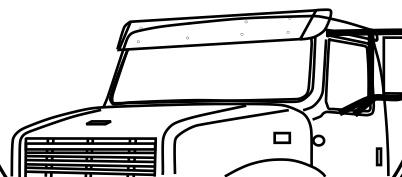

Bolt Kit

	QTY: 8	Pan Phillips	1/4 - 20 x 3/4
	QTY: 26	Flat Washer	1/4 x 5/8
	QTY: 8	Weld Nut	1/4 - 20 x 1"
	QTY: 8	Hex Head	1/4 - 20 x 1 1/4
	QTY: 8	Nylon Hex Nuts	1/4 x 20