


Ken -2001


Step 1

Remove original visor & grind off original brackets from truck. Grind the "Huck Bolt" to take brackets off.

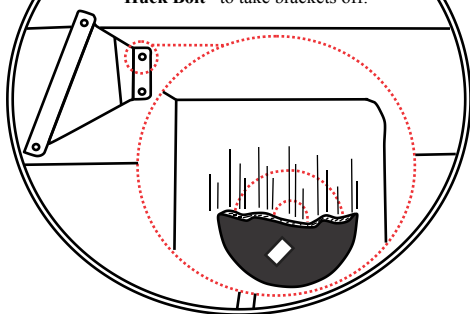


Step 2

Remove the mirror bracket.

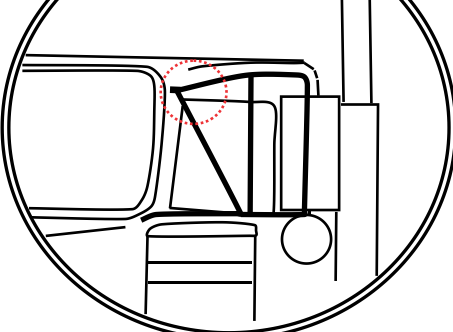


Step 3

Assemble visor with brackets. Mount Visor the using side screws. Mark holes for new Brackets on cab. Remove visor and drill marks out to a 3/8 hole

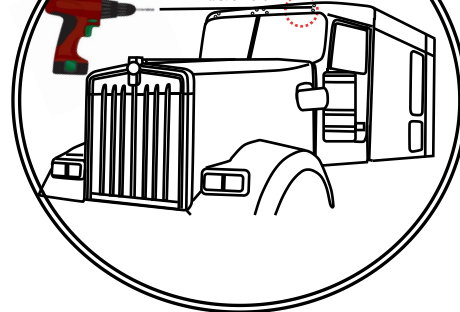


Step 4

Mount new brackets & tighten them on to the truck.

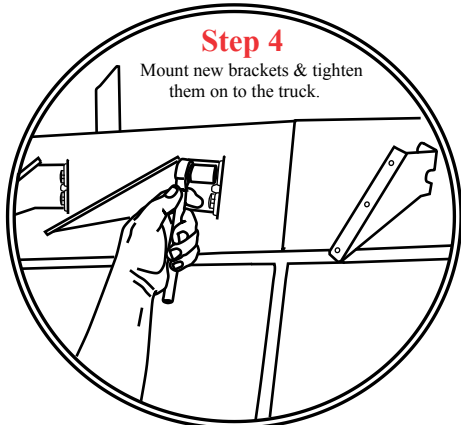


Step 5

Place the visor over the Brackets. Insert & tighten all screws. Remount your mirror brackets.

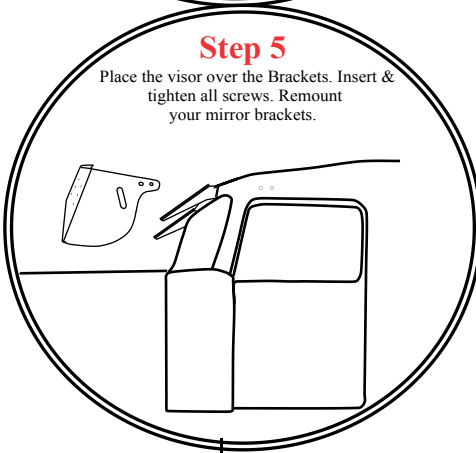

Step 6

You are finished. Remove plastic from the visor & clean with windex.

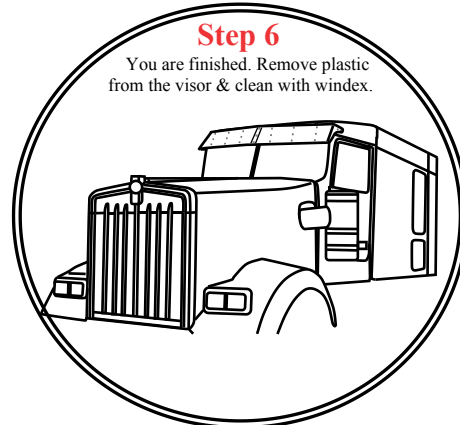

Reuse Original Bolts

Notes

- Use silicone or something similar to patch any exposed holes.
- Drill cautiously to avoid puncturing the cabs interior
- Insert screws "loosely" starting from outer edge to center. Then start "tightening" from center to outer edge.

Bolt Kit			
	QTY: 12	Pan Phillips	1/4 - 20 x 3/4
	QTY: 20	Flat Washer	1/4 x 5/8
	QTY: 8	Weld Nut	1/4 - 20 x 1"
	QTY: 8	Hex Head	1/4 - 20 x 1 1/4
	QTY: 12	Nylon Hex Nuts	1/4 x 20
	QTY: 3	Pan Phillips	10 - 32 x 1/2
	QTY: 6	Flat Washer	# 10
	QTY: 3	Nylon Hex Nuts	10 - 32

