

Fre -3081

Figure 1

Take Off The Old Visor & Put Together The New One With The Brackets. You Will Need To Mark New Holes On The Cab To Fit The Visor Properly.

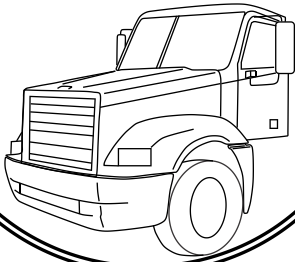


Figure 2

Assemble The Visor Together With The Brackets But Remember To Hand Tighten Them. Once You Have The Visor Together Place It On The Truck & Mark The Brackets Holes With A Marker & Sides, Then Take Off The Visor. Drill With 1/2 Drill Bit



Figure 3

Put on New Brackets & Tighten Them On To The Truck

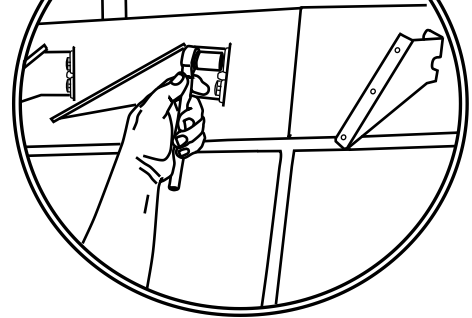


Figure 4

Now Place The Visor On Top Of Brackets & Put On All Screws on Visor & Tighten All Of Them Starting w/ The Side Ones, Then The Middle & finally The Last Ones Next To The Middle Ones




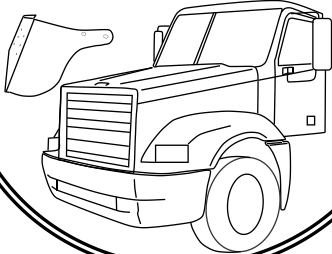


Figure 5

Now That You Are Finished With Installing Your ATA Visor Take Plastic Off The Visor & Clean With Windex

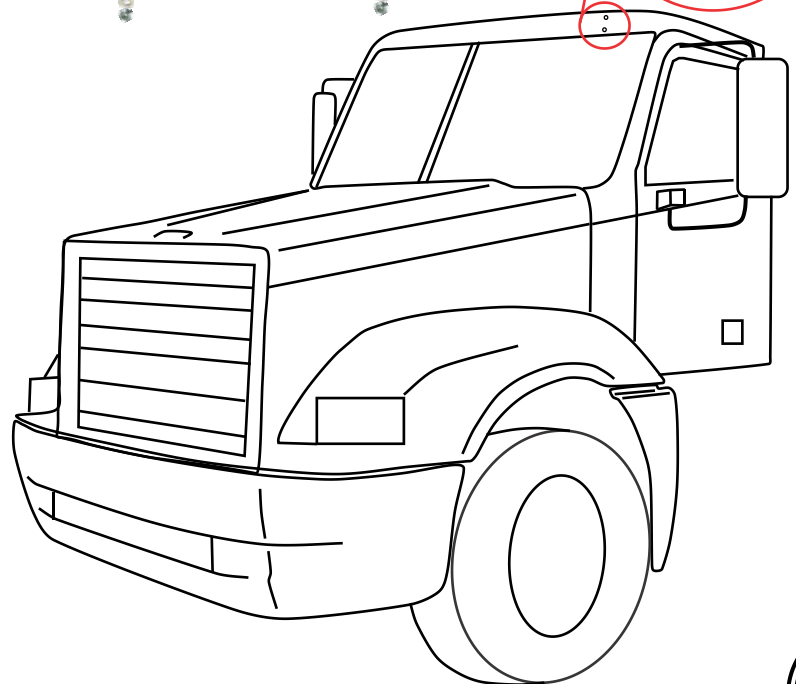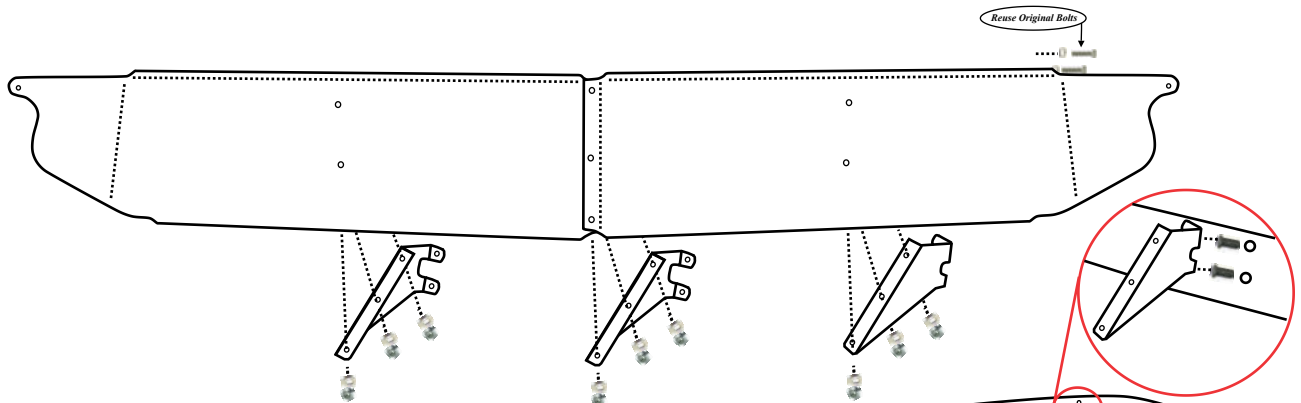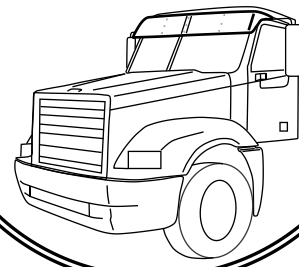

Bolt Kit

	QTY: 11	Pan Phillips	1/4 - 20 x 3/4
	QTY: 40	Flat Washer	1/4 x 5/8
	QTY: 6	Weld Nut	1/4 - 20 x 1"
	QTY: 6	Hex Head	1/4 - 20 x 1 1/4
	QTY: 11	Nylon Hex Nuts	1/4 x 20