


Fre -3001


Step 1

Remove original visor only. Do not remove Original cab mounted brackets. Mount new brackets to (top & bottom) visor screw holes loosely.

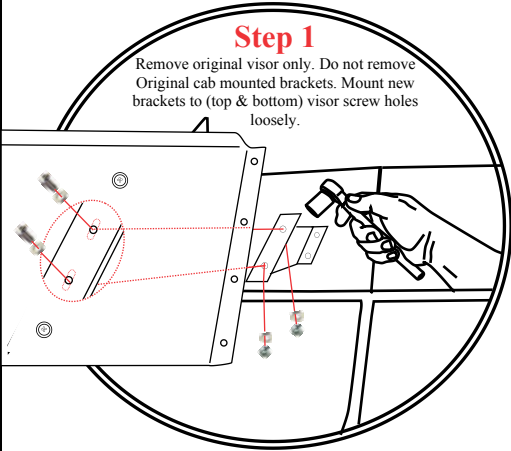


Step 2

Mount the visor over the brackets. Insert & tighten all screws.

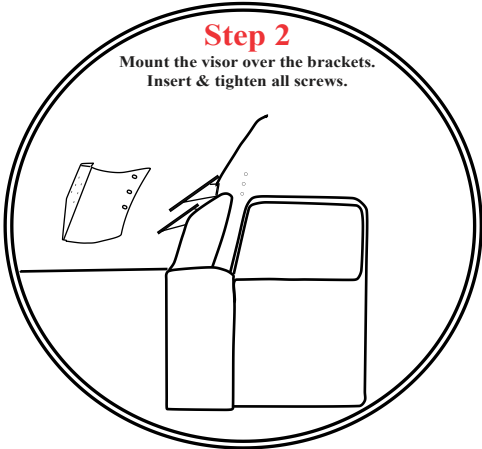

Step 3

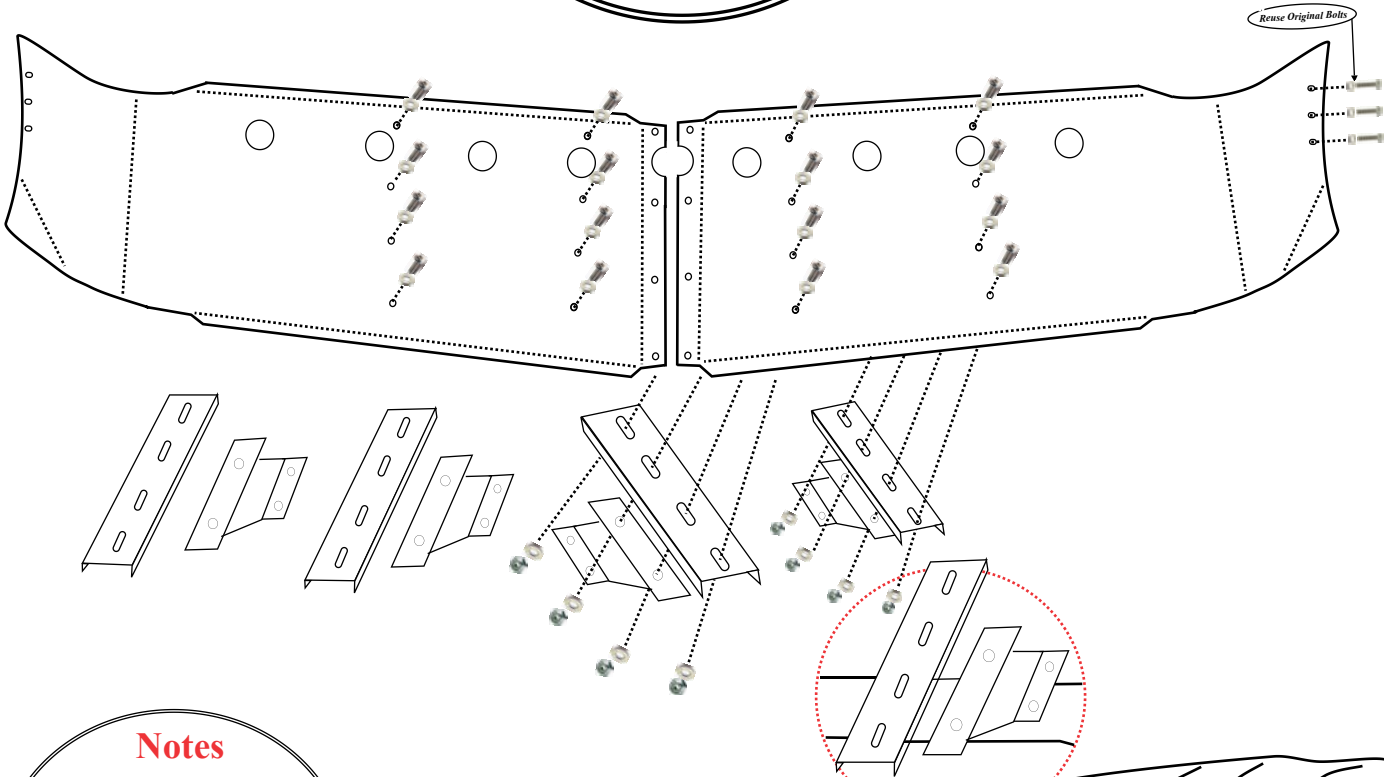


You are finished. Remove plastic from visor & clean with windex.



Notes

- Use silicone or something similar to patch any exposed holes.
- Drill cautiously to avoid puncturing the cabs interior
- Insert screws "loosely" starting from outer edge to center. Then start "tightening" from center to outer edge.

Bolt Kit

	QTY: 40	Flat Washer	1/4 x 5/8
	QTY: 20	Nylon Hex Nuts	1/4 x 20
	QTY: 20	Pan Phillips	1/4 - 20 x 3/4

