


K-2013

Step 1


Remove original visor & grind off the original brackets from truck. Grind the "Huck Bolt" to take brackets off.

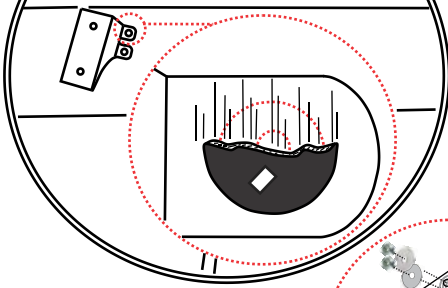

Step 2


Loosen the headliner from the inside, in order to tighten the screws for the brackets

Headliner

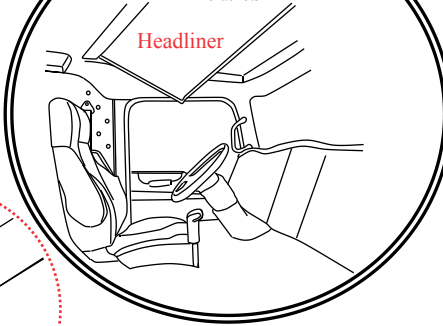


Step 3

Assemble visor with brackets. Mount Visor using the original side screws. Mark holes for new brackets on cab. Remove visor and drill out Marks to a 3/8 hole

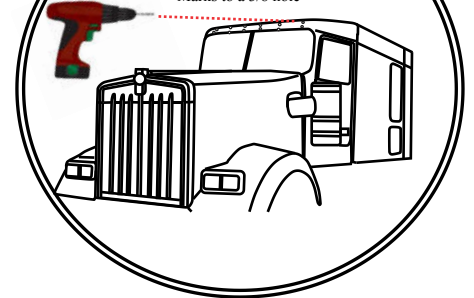


Step 4

Mount new brackets & tighten. You will need one person inside the truck and one tightening from the out side. **Remember** to put silicone behind washers.

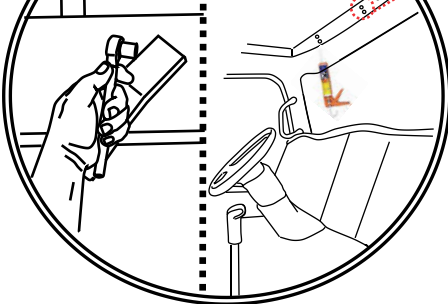



Step 5

Place the visor over brackets & tighten all screws.

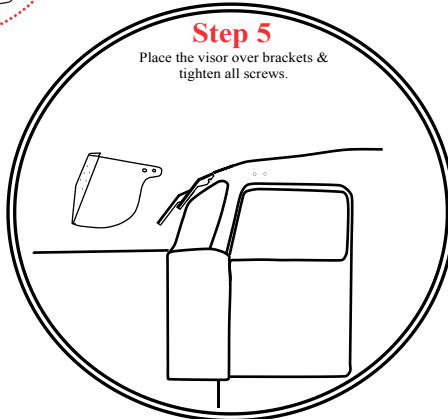

Step 6

You are finished. Remove plastic from the visor & clean with windex.

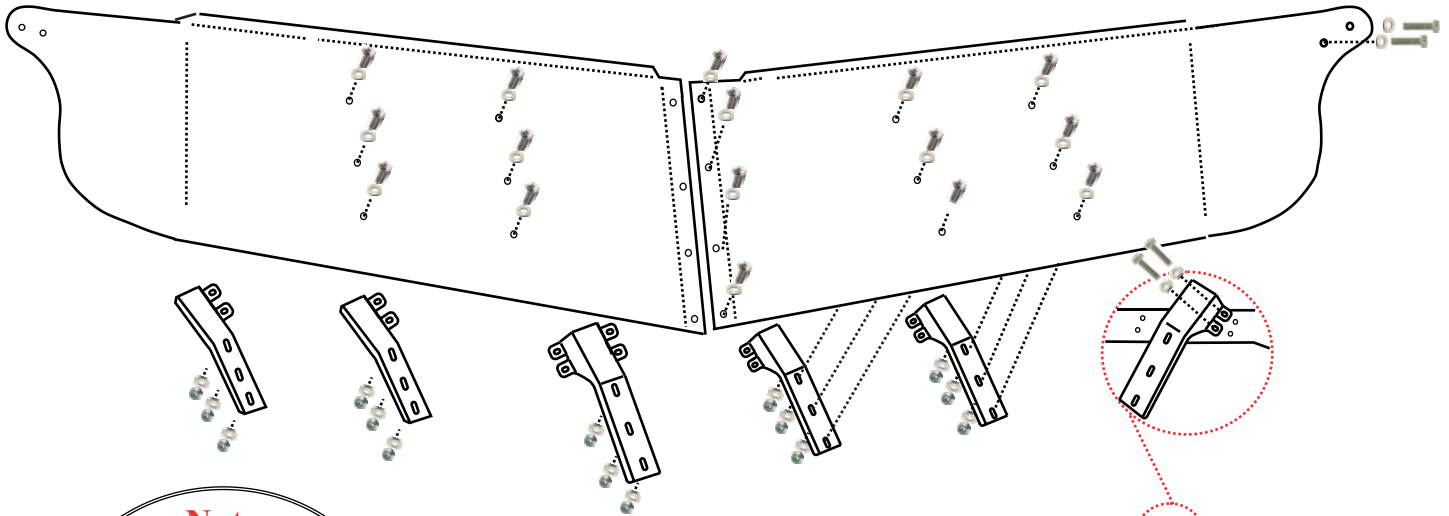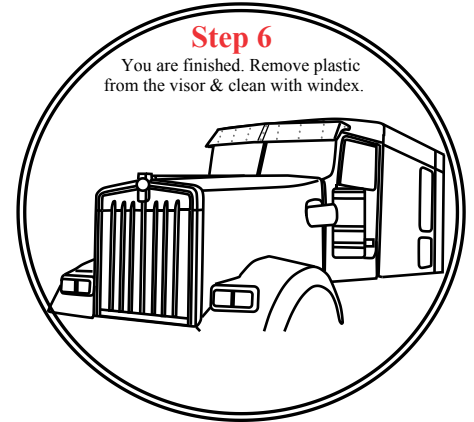

Notes

- Use silicone or something similar to patch any exposed holes.
- Drill cautiously to avoid puncturing the cabs interior
- Insert screws "loosely" starting from outer edge to center. Then start "tightening" from center to outer edge.

