

Fre-3160

Step 1

Remove original grill from the truck.


Step 2

Insert all screws into original holes.

Step 3

You are finished! Clean with windex.

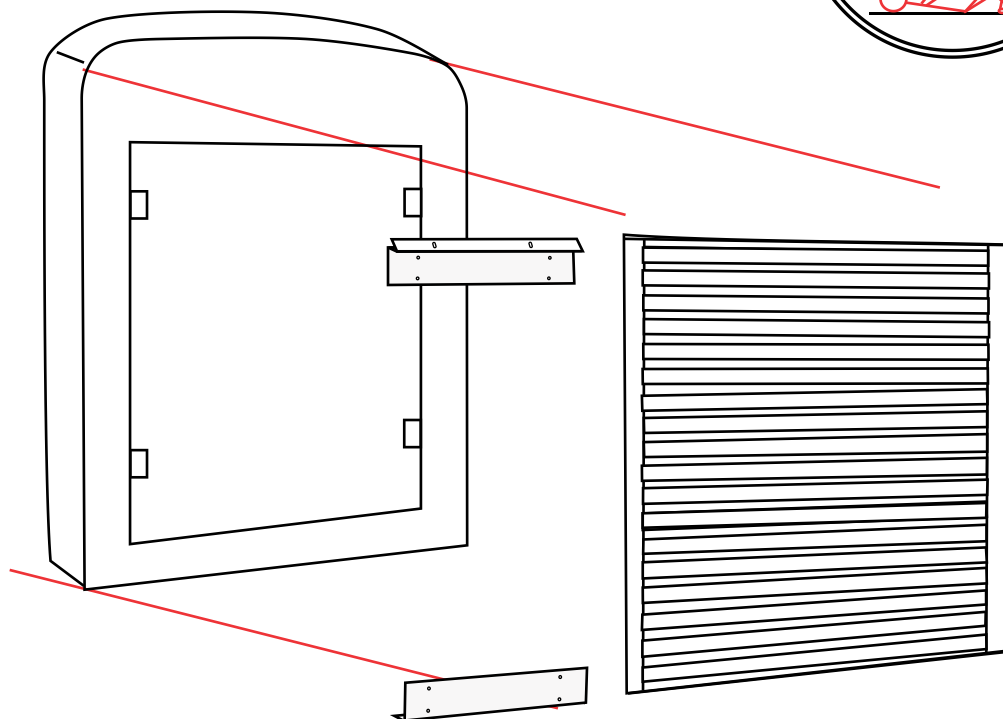


Example



Notes

- Tighten screws evenly, so grill is centered.
- Take complete safety precautions prior to installing grill with open hood.

Bolt Kit

	QTY: 3	Hex Head	1/4 - 20 x 1 1/4
	QTY: 6	Flat Washer	1/4 x 5/8
	QTY: 3	Nylon Hex Nuts	1/4 x 20