


# Ken -2057, 2120


## Step 1

Remove original grill from the truck.

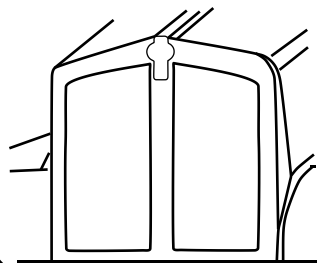


## Step 2

Installation requires two people.  
The first person to hold the front of the grill while the hood is opened & insert the screws.  
The second person stands inside the opened hood to tighten the nuts. Insert all screws into original holes.


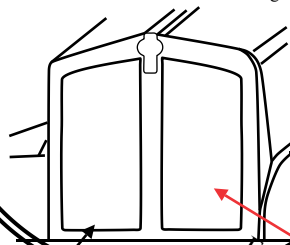


Example

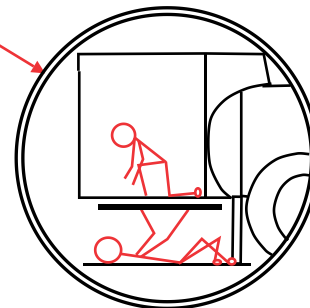

## Step 3

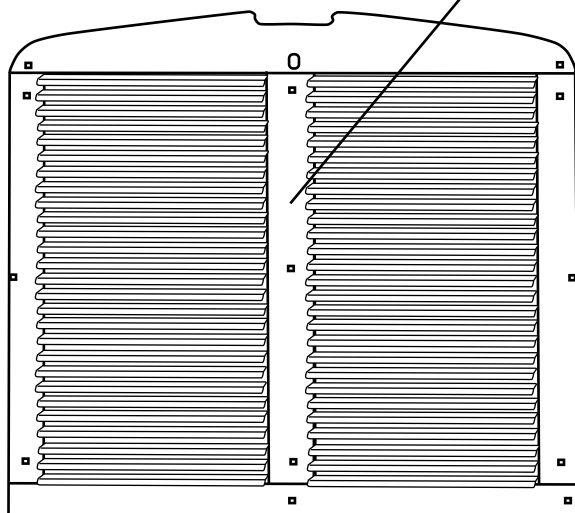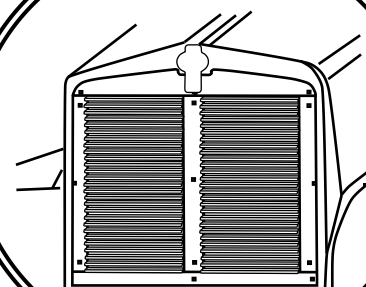


You are finished! Clean with windex.



## Notes

- Tighten screws evenly, so grill is centered.
- Take complete safety precautions prior to installing grill with open hood.
- Tighten bottom piece first on to the truck. Then the sides are second & last would be the top piece.

## Bolt Kit

|   |         |                         |                  |
|---|---------|-------------------------|------------------|
|  | QTY: 13 | Carriage Bolts 18-8 S S | 1/4 - 20 x 1 1/4 |
|  | QTY: 13 | Nylon Hex Nuts          | 1/4 x 20         |
|  | QTY: 13 | Flat Washer             | 1/4 x 5/8        |

